


Driver Setup Manual


一、Windows Driver Installation

1.1 Before installing the printer driver, please connect your printer to the computer and make sure the power switch is turned on, Double click the installation PN8x Printer Setup Vx.xx.exe, Then, it will show as below picture:

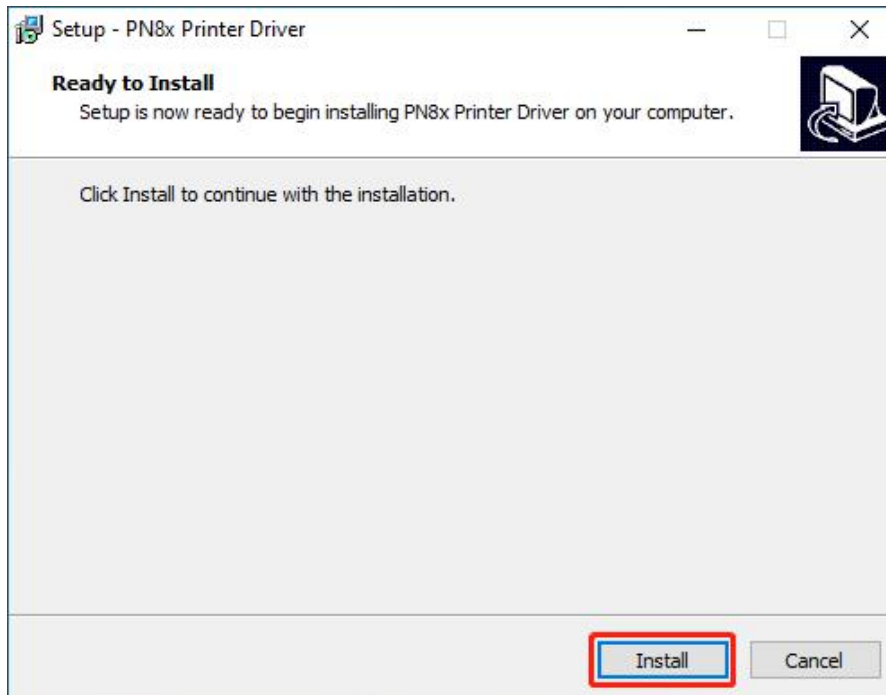


1.2 Then click "Install"

1.3 Click "Finish" to finish driver installation.

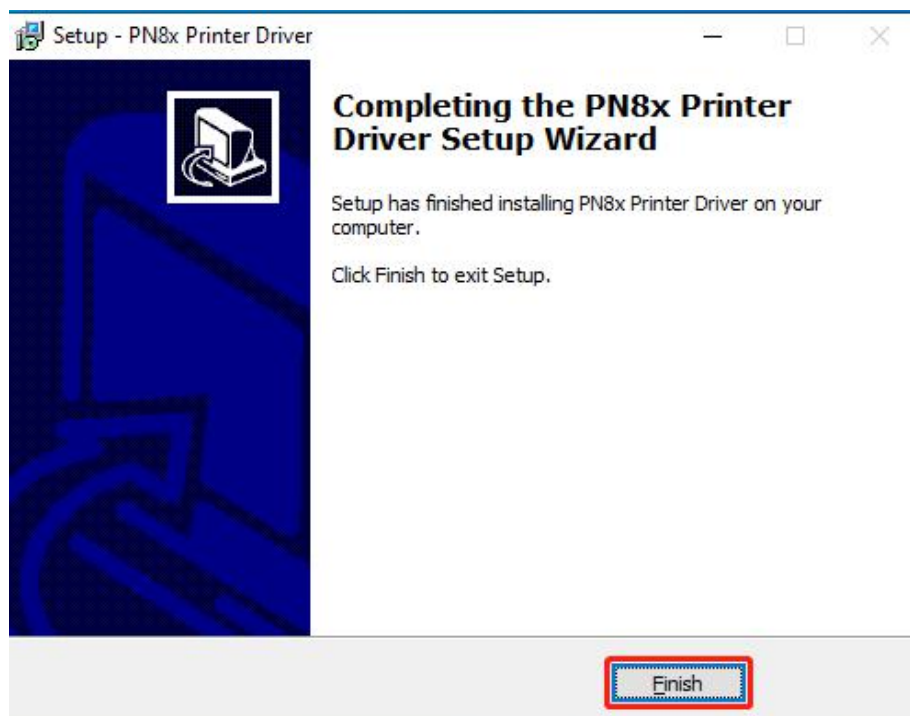


二、Printer Setup and Testing


2.1 Setup Printer Properties

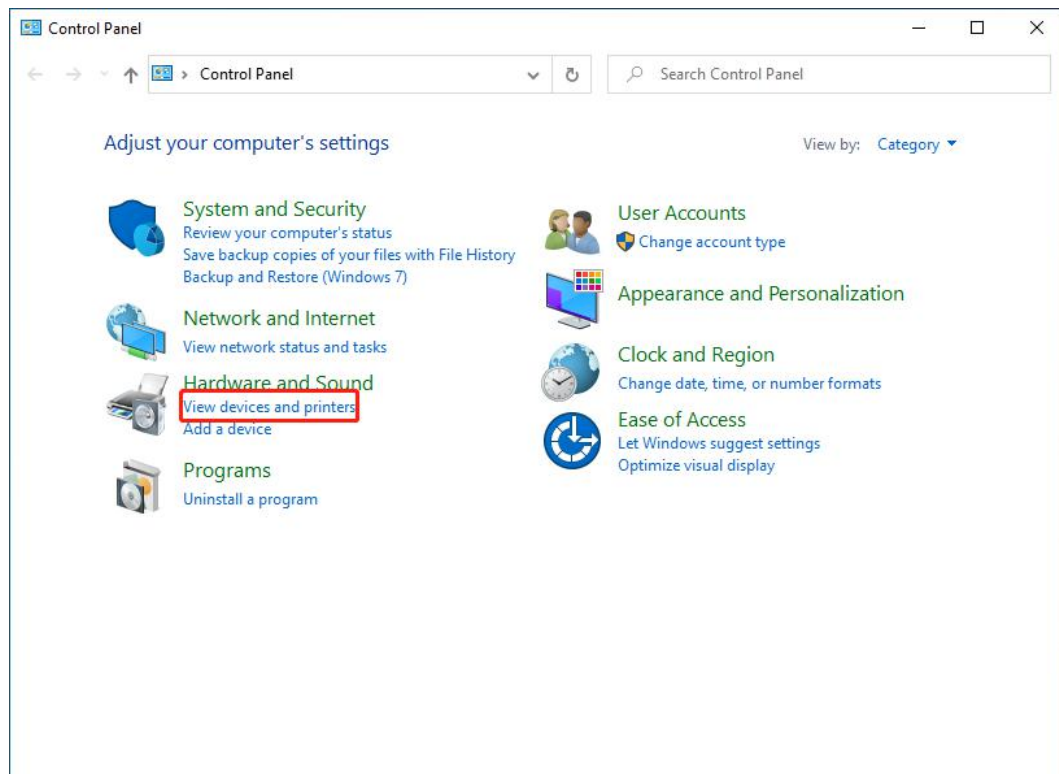

Right-Click " PN81 Printer" and then click "Printer properties"

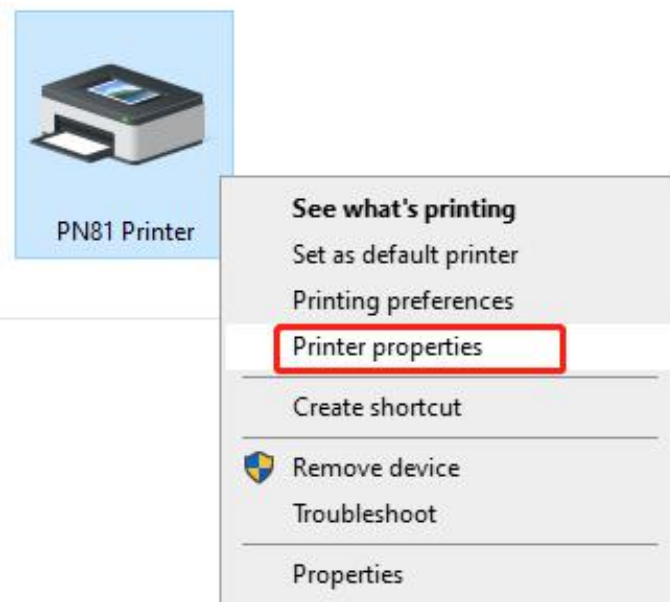

And then, it will show as below picture:

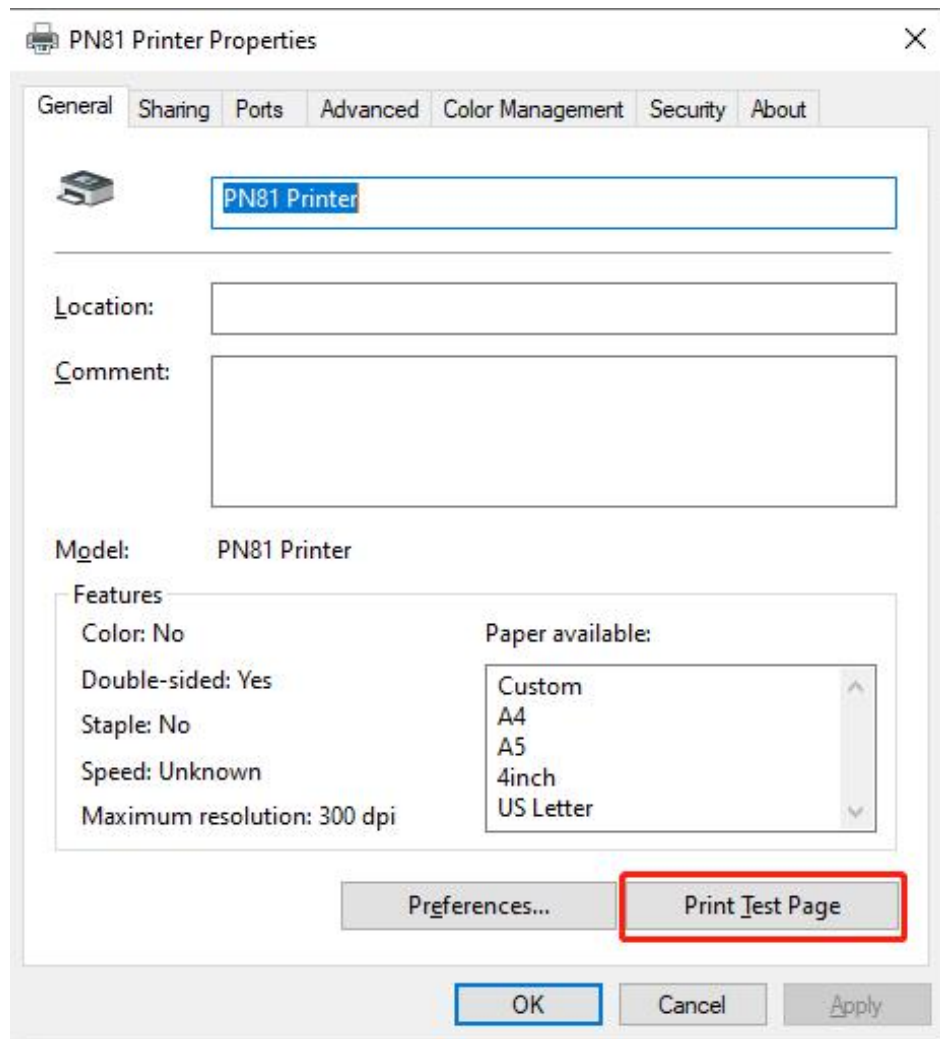


Click "Print Test Page", the printer will print test page, which means the printer has been connected with computer successfully and the port configuration is correct.


2.2 Other Properties and Function Configuration

2.2.1 You could set the paper specification etc., please refer to the follows:



Select the printer properties, click on "Print preferred page", enter the page and print settings interface, as shown in the following figure.

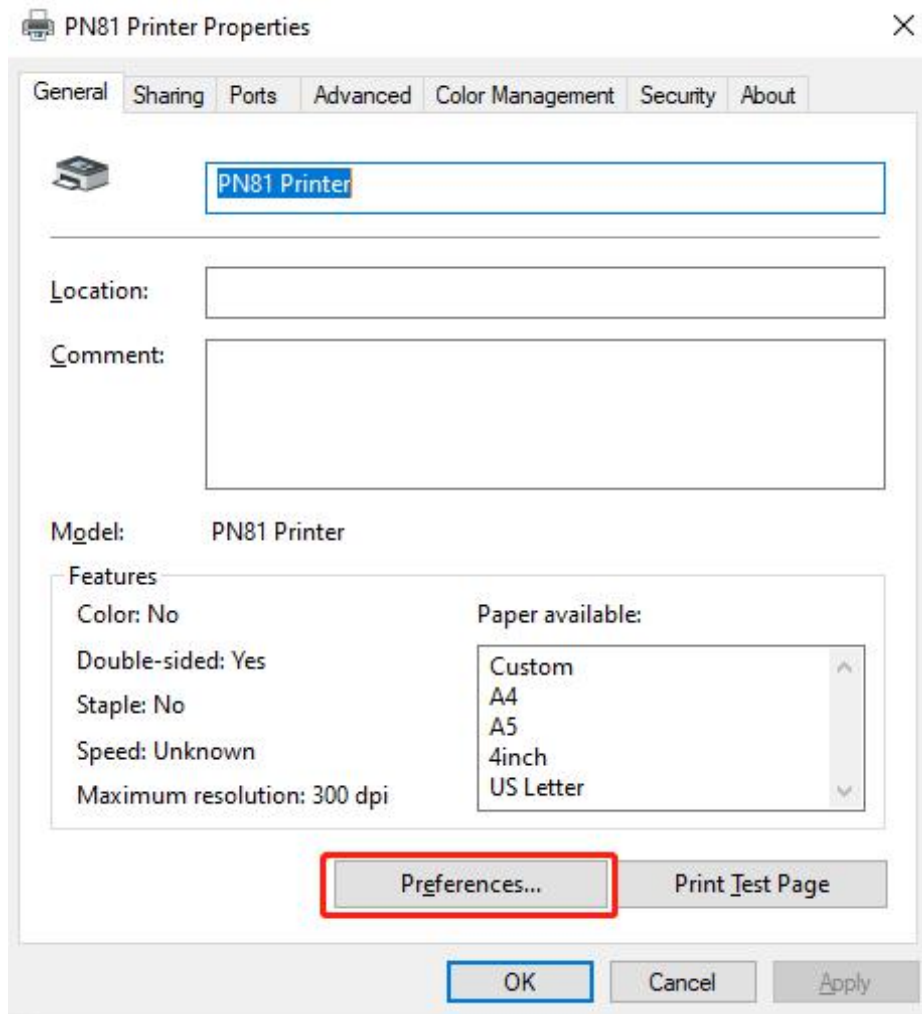



2.2.2 Click the Paper Name drop-down box to select the paper size to use.

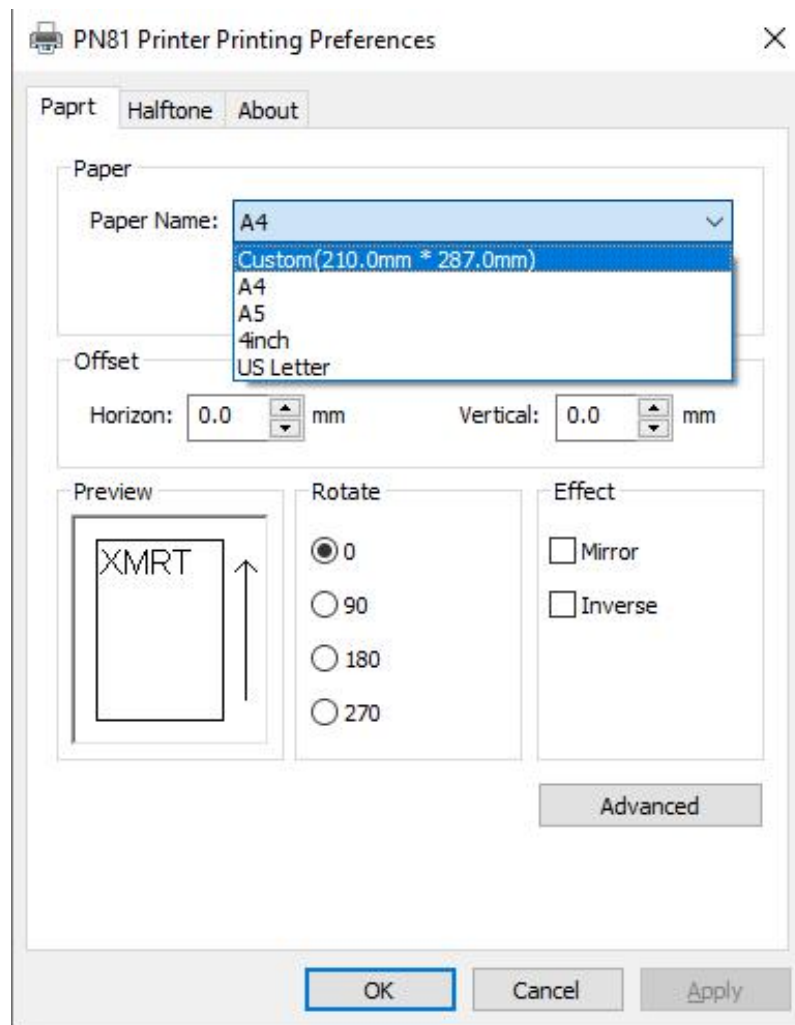


2.2.3 Click "Halftone" to enter the custom haft tone setting

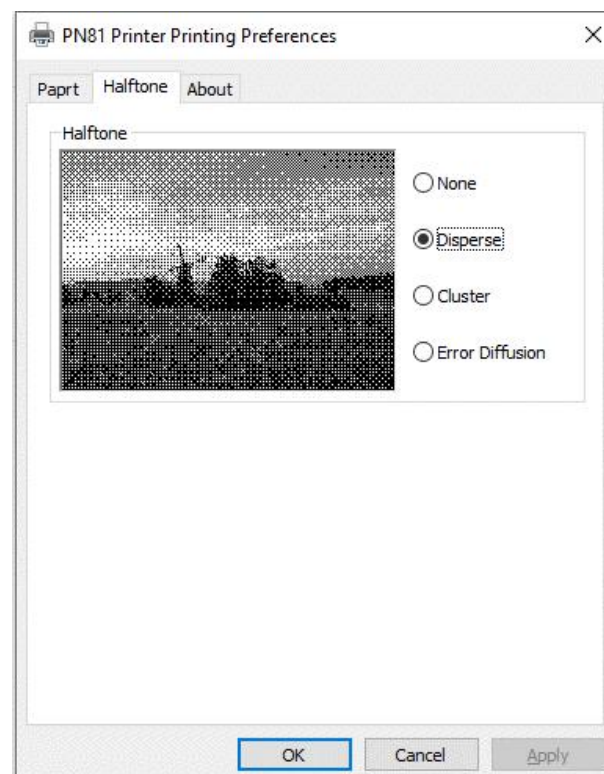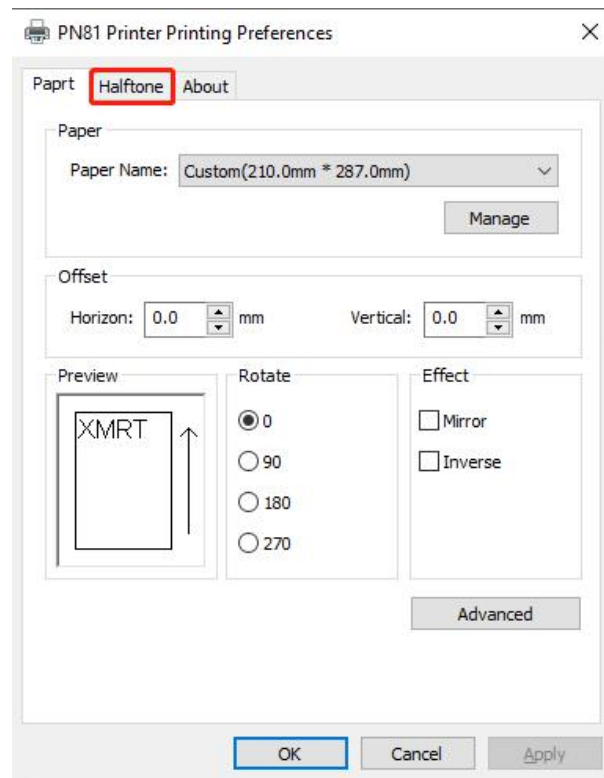

2.2.4 Click "Manage" to enter the custom paper interface.

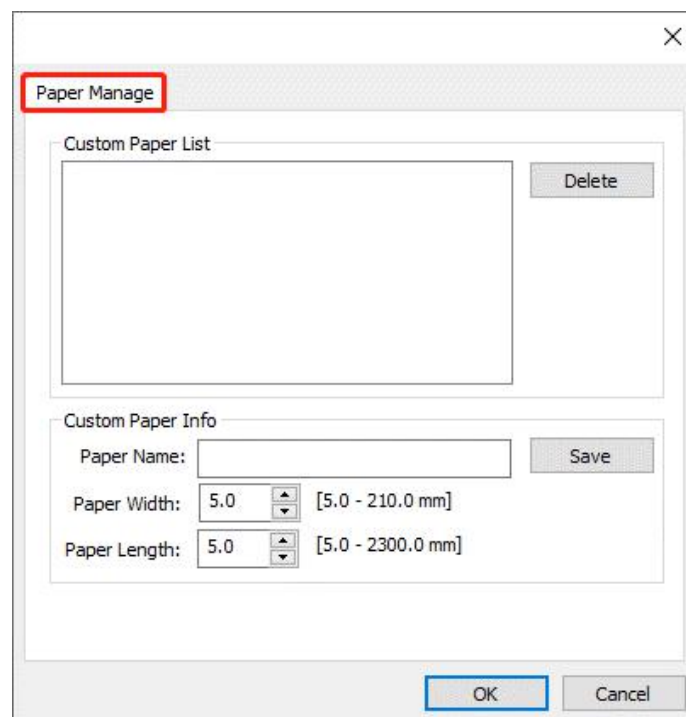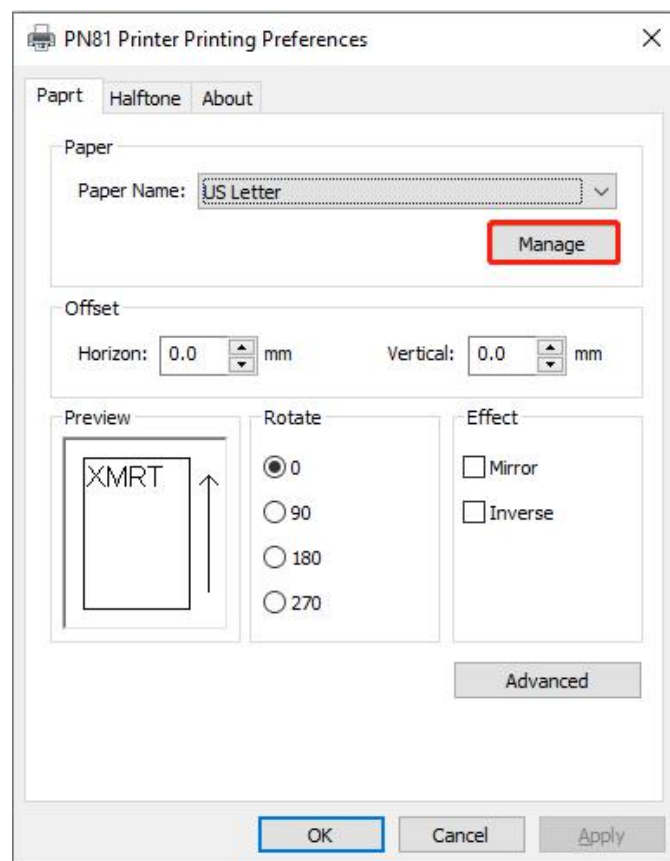

2.2.5 Offset sets horizontal and vertical margins. Rotate to print in different directions.

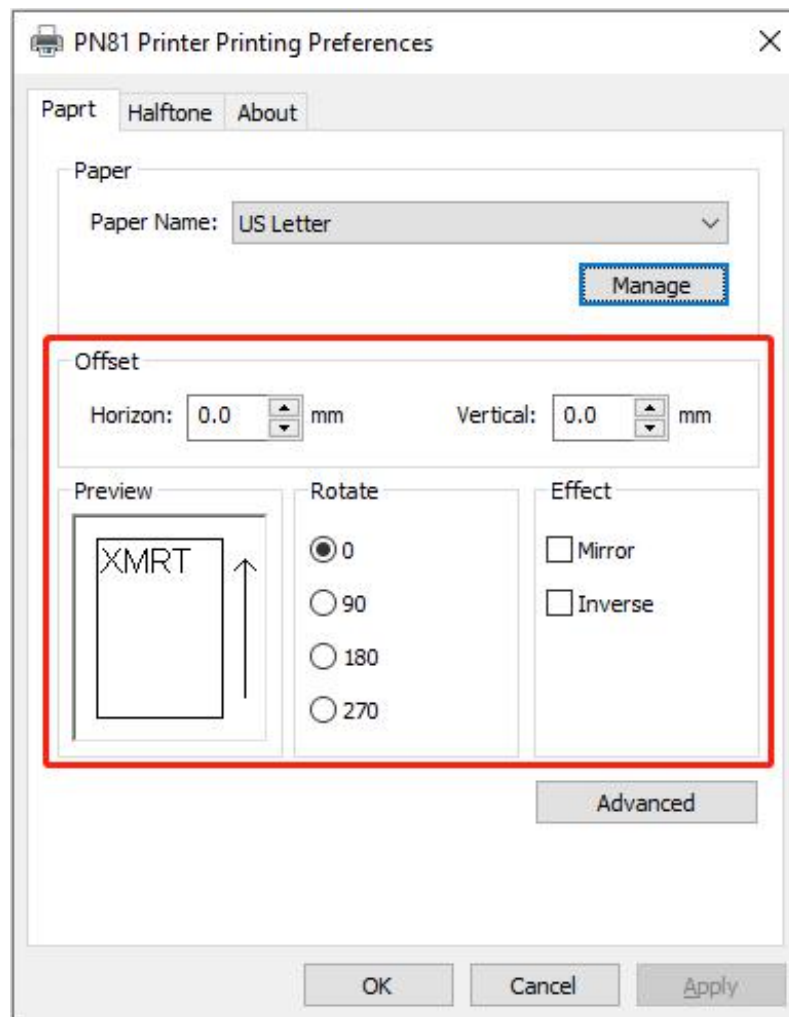

2.2.6 Click Advanced Settings to enter the Set Print Density 、Set Print Speed and Set Media Tracking screen as shown in the following figure.

